divacore®
nomad system

MOJITO
«WARRANTY 1 YEAR»

www.divacore.com

MOJITO

The new **MOJITO speaker by DIVACORE® Nomad System** makes you listen to your favorite music, movies and videos wherever you are.

SD Card MP3 Player and FM Radio Player with Integrated LCD Screen

Fully compatible with all mobile devices.
Add a soundtrack to whatever you do.

About DIVACORE ® Nomad System

With his headquarter based at Europe's crossroad, DIVACORE ® Nomad System is focused on innovation,multimedia and audio.

Our ability to anticipate expectations will symbolize the success of our company.
Main objective of DIVACORE ® Nomad System is to anticipate lifestyle's evolutions and offer ideal solutions for our multimedia systems all turned portable and nomad.
Exceptional and powerful sound, incredible battery life, the quality of our products is outstanding and we will always offer you the latest features existing.

DIVACORE ® Nomad System:
Leading Nomad Speakers.

Contents

Your package should contain all the items listed below.
if there are any missing items, please contact your reseller :

Packing list:
- 1 Nomad speaker MOJITO
- 2 User manuals (EN+FR)
- 1 USB cable to mini USB
- 1 Mini USB cable to audio 3.5 mm/FM
- 1 sacoche de transport

MOJITO speaker

2 User manuals(FR+EN)

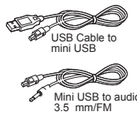

transport bag

USB Cable to mini USB

Mini USB to audio 3.5 mm/FM

Charging

Mini USB: charge/audio input

Mini USB to audio 3.5mm/FM

To charge your speaker :
1 - Connect the USB connector to your computer (or USB charger – wall or car)
2 - Connect the Mini USB to your speaker.

To listen to audio:
3 - Connect the mini USB to your speaker
4 – Audio 3.5 mm to connect to your audio device or not plug act as FM Antenna

While the battery is charging :
1 - Connect the USB connector to your computer (or USB charger – wall or car)
2 - Connect the Mini USB to your speaker.
Battery indicator will be active.
It remains fix once full charge.

Connect

Speaker

Connect the mini USB to your speaker and audio 3.5mm to your audio device.

FM Radio

Connect anything in audio out 3.5 mm antenna hole
Your item (headset in our example) will act as an antenna.

Connect the audio 3.5 mm cable to your speaker – it will act as an antenna.

MOJITO Controls

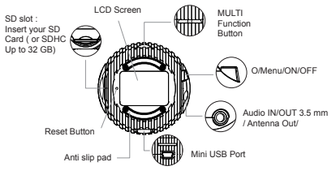

CLOSED: To travel

OPEN: To listen

Core Active Bass

Key Functions

CALENDAR
Check time
Check date

MUSIC
Check SD Card contents

AUX
Line IN
AMPOFF
Mute

FM RADIO
Radio Stations

SETTINGS
Date& Time settings
Backlight time
Language
Tools
Time to sleep
Alarm
FM settings

MAIN Functions

NB : Always Press a first time the MULTI BUTTON or O/MENU BUTTON to activate your controls. Backlight will blink stronger once active.

TIME
Once active, your LCD screen will show you actual time.
Flick the MULTI button to the right or left to access the MENU.

MENU

Flick the MULTI button to the right or left to navigate inside the MENU :
CALENDAR AUX MUSIC
RADIO SETTINGS

Confirm your choice with O/MENU button.

MUSIC Mode

Insert a SD card (or SDHC up to 23 GB) in the SD slot of your MOJITO and enjoy all informations and controls of a MP3 player directly on your screen.

MAIN Functions

VOLUME UP/DOWN

Volume Up : rotate and hold the MULTI button to the right
Volume Down : rotate and hold the MULTI button to the left

LINE IN – CONNECT THEM

You can connect your MOJITO to another one :
And get more power .
Add always more speakers to get more power !

FM RADIO

Enjoy FM radio and record your favorites.
Unique : You can auto scan the complete FM range.
And register the best ones.

Settings

SETTINGS

Date& Time settings
Backlight time
Language
Tools
Time to sleep
Alarm
FM settings

CHARGING

1 - Connect the USB connector to your computer (or USB charger – wall or car)
2 - Connect the Mini USB to your speaker

A charging signal will be shown on LCD screen.You can also charge your speaker while speaker is OFF.

How to open/close the speaker

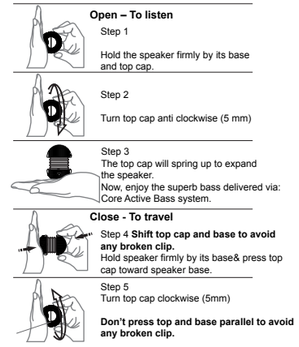

Open – To listen

Step 1

Hold the speaker firmly by its base and top cap.

Step 2

Turn top cap anti clockwise (5 mm)

Step 3
The top cap will spring up to expand the speaker.
Now, enjoy the superb bass delivered via: Core Active Bass system.

Close - To travel

Step 4 **Shift top cap and base to avoid any broken clip.**
Hold speaker firmly by its base& press top cap toward speaker base.

Step 5
Turn top cap clockwise (5mm)

Don't press top and base parallel to avoid any broken clip.

Specifications

Model : **MOJITO – DVC4502**
Dimensions : Diam. 64 mm x (height) x 54 mm
Net Weigth : 94.8 g
Speaker : Diam. 45 mm
Input sensitiviyt : L/R 380 mV
Output Power : 3 W
Charge Voltage : 5V +/- 0,5V
Frequency : 1000 Hz – 16 KHz
Charging time : 1.5 - 2 hours
Playing time : 8 hours
Suitable temperature : 0°C – 40° C

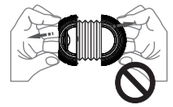

⚠ Caution: Pulling the flexible resonator beyond its normal range can permanently damage the speaker.

Core Active Bass

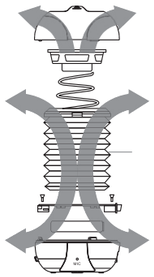

Core Active Bass
(patented technology)

divacore®
nomad system

© Copyright 2011
All rights reserved
Manual v. 2 , Oct 2012